

Instrukcja montażu gmoli dla

# BMW R 1200 GS (04-12)



W skład zestawu wchodzi:

1. Orurowanie górne
2. Dwie obejmy typu „U”

**UWAGA!** Należy zwrócić szczególną uwagę na instalację elektryczną. Kategorycznie zabrania się, aby wiązka instalacji była przyciśnięta przez orurowanie lub obejmę.

Orurowanie powinno być zakładane tylko przez osobę wykwalifikowaną.  
Całość orurowania założyć swobodnie dopiero po założeniu skręć docelowo.

1. Dolną część orurowania założyć na śruby od poprzeczki orurowania dolnego (rys. 1).
2. Górną część orurowania przykręcić do stelaża motocykla obejmami typu „U” (rys. 2).

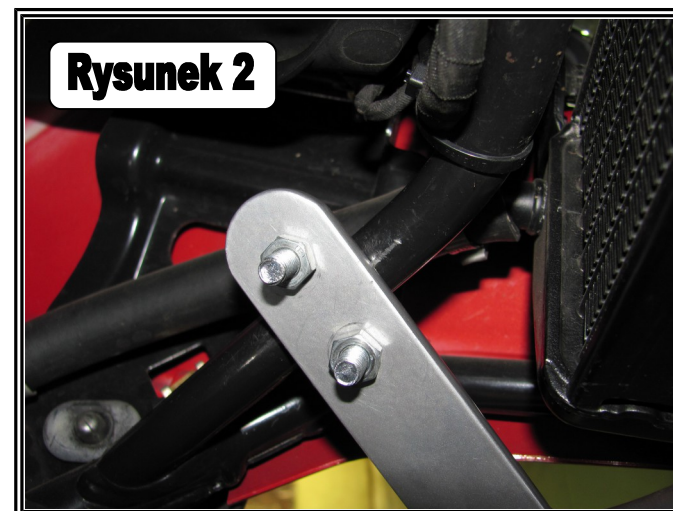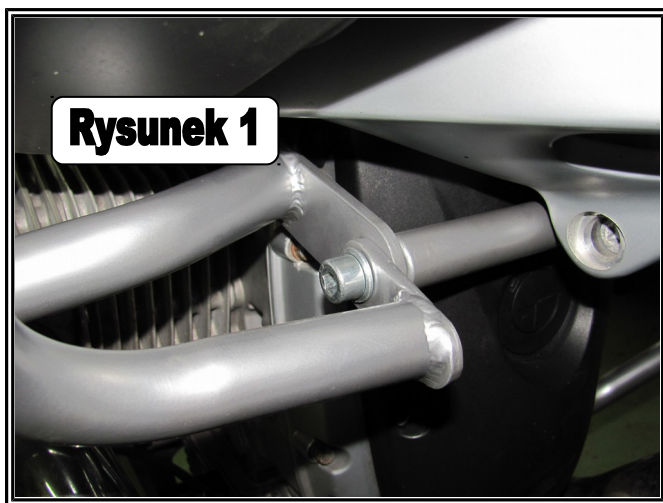

**HEED**

[www.heed.com.pl](http://www.heed.com.pl)

Installation Instructions for crash bars of

# BMW R 1200 GS (04-12)



The set includes:

1. Upper pipes.
2. Two clips "U".

**NOTE:** Pay particular attention to the electrical system. It is absolutely forbidden to press wiring installation by piping or bracket.

Piping should be fixed only by a qualified person.  
The entire piping set up freely and at the end turn it on

1. Install the lower part of the pipe with the screw of the lower cross pipe (Fig.1).
2. Fix the upper part of the pipe to the bike rack with clips "U" (Fig.2).

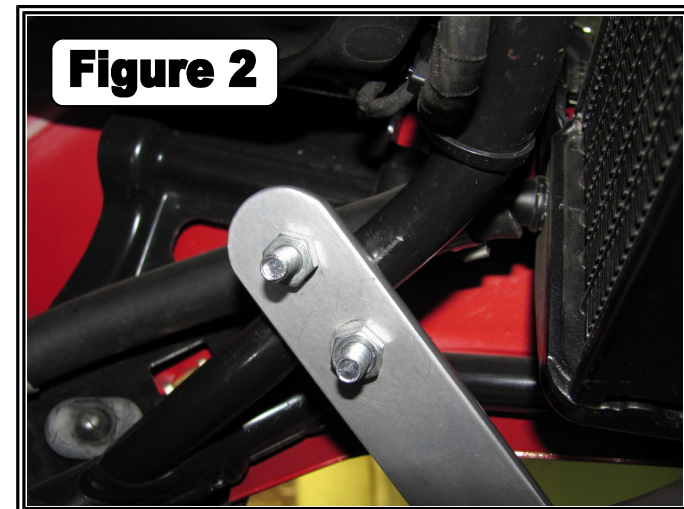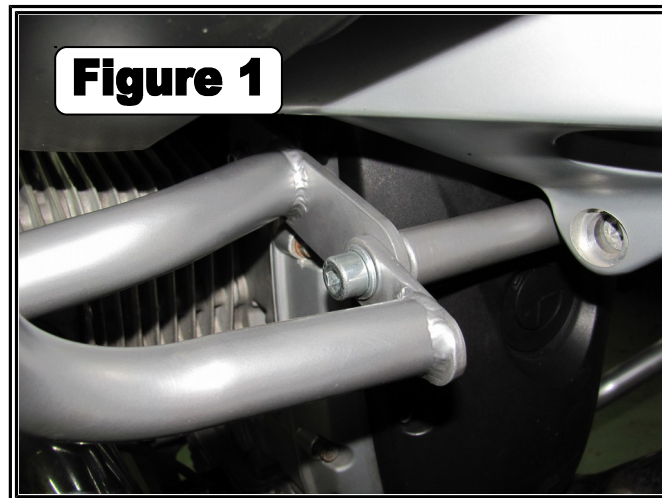

**HEED**  
[www.heed.com.pl](http://www.heed.com.pl)